


**Nighthawk** - 4X Night Weapon Sight  
(Without P Rail Grabber) Part No. AA-658401-03  
**Nighthawk** - 4X Night Weapon Sight  
(With P Rail Grabber) Part No. AA-658399-01

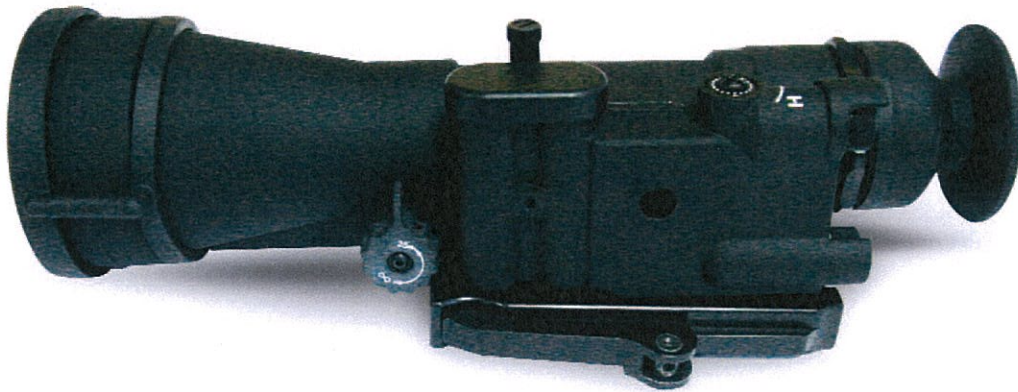



Constructed from a rugged aluminium housing which provides durability and dependable boresight retention during the entire mission, including at extreme temperatures.

To enhance the survivability and operability of this sight, the external objective lens and eyepiece lens elements are protected with an ultra-durable (scratch-resistant) coating which permits cleaning without fear of damage to the optical coatings.

This weapon sight provides excellent observation, target acquisition and aiming capabilities at night.

The weapon sight incorporates an illuminated (injected) reticle which is sharply defined and has variable intensity for best contrast against a light or dark target.

P-rail grabber: Part No. AA-651170-04 (0.2kg)

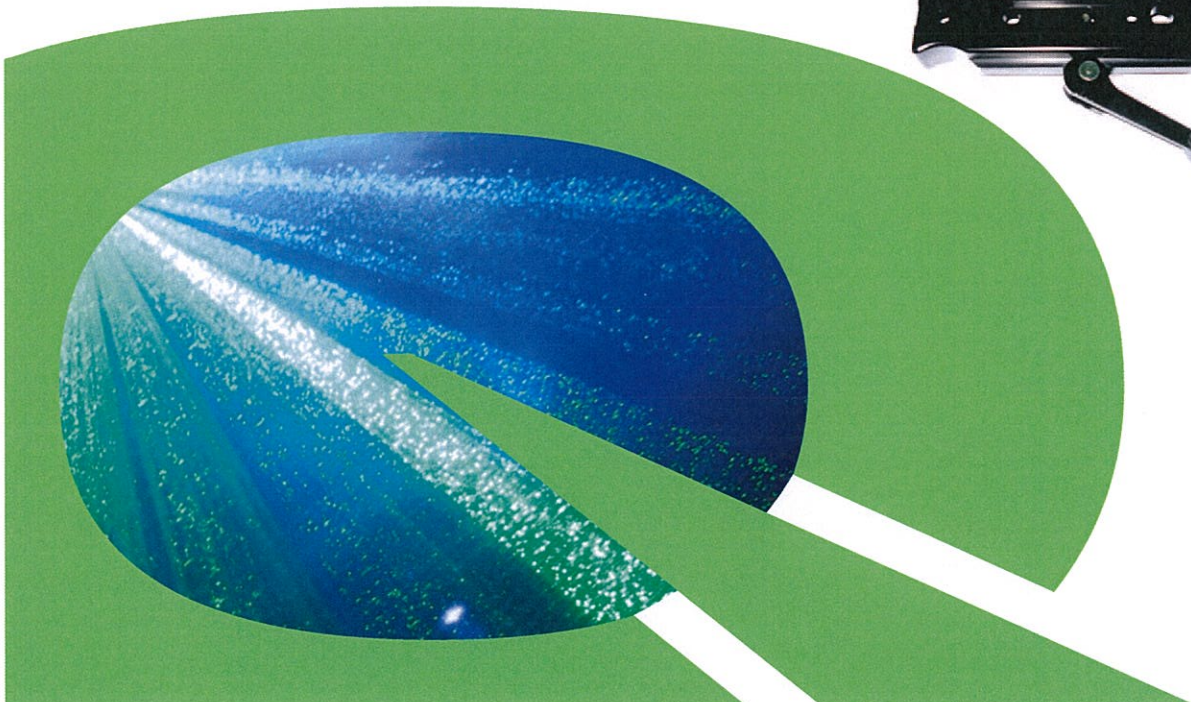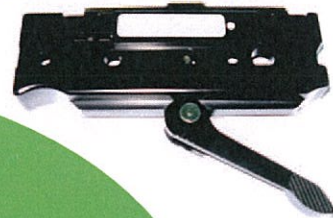

**Nighthawk 4X Night Weapon Sight**  
(Without P Rail Grabber) Part No.AA-658401-03

**Nighthawk 4X Night Weapon Sight**  
(With P Rail Grabber) Part No.AA-658399-01

<b>Optical Data</b>	
<b>Magnification</b>	X4
Field of View	8.2°
Objective Lens Focus	25m to infinity
Eyepiece Focus	+2 to -5 dioptres
Eye Relief	30mm
Entrance Pupil (Objective Lens)	70mm
Exit Pupil (Eyepiece Lens)	7.5mm
Reticle Type	Injected Ballistic (design optional)
Reticle Adjustment	+/- 15 mrad
II Tube Type	Gen 2, Gen 2+, Gen 3
Power Supply	'AA' Alkaline Batteries (2 X 1.5v)
Battery Life	40 hours (nominal) at 20°C 12 hours (nominal) at 0 to -40°C
<b>Operating Temperature</b>	
Min / Max	-54°C to +52°C
<b>Dimensions</b>	
Length	287mm (excluding daylight cover)
Height	86mm (excluding P-rail grabber)
Width	102mm
<b>Weight</b>	
Excluding P-rail grabber, II Tube, batteries and daylight cover	<b>1.23kg</b>

Disclaimer: Information above is for reference only. Qioptiq Singapore reserves the right to amend or change the information without prior notice.

**For technical information contact:**

Qioptiq Singapore Pte Ltd  
Tel: +65 64 99 77 66  
Email: customer.service@sg.qioptiq.com  
www.qioptiq.com

